


SAFETY PRECAUTIONS TO NOTE BEFORE INSTALLATION COMMENCES

Please note these very important steps, which must be followed when installing the Sani Discs.


1. Under no circumstances put the UV globes onto the fitting until they are installed on the ceiling **AND covered**.
2. UV is dangerous to the human eye and if looked into directly, may cause 'Arc Eye'. We will not be held liable or responsible for any injuries to installers who do not comply with this instruction.
3. Certified Eye protection must be used when installing the globes and switching the unit on. (Available from us if necessary)
4. The Sani Disc must be installed at least 2.7 meters above floor level. Do not install the unit lower than this under any circumstances. We have got a Sani 55 Wall mount unit for this purpose.
5. The units should be installed approximately 4 meters apart to provide efficient sanitization. The recommended cubic capacity per fitting is 36 Cubic meters. This will produce one burning Watt per cubic meter power, which is effective against all known TB Bacillus including XDR TB.
6. Install in clusters of up to 10 units per isolator switch (7A) connected to a single phase distribution board. Each unit draws 0.2A. This will make servicing easier at a later stage. The isolator switch/s should be mounted in an accessible position to allow for easy switch off should this be necessary.
7. Use cable 1.5mm diameter or greater when wiring the system. A certificate of Compliance should be supplied at hand-over of the installation.
8. The units may be fixed to the ceiling (Reinforced or suspended) with screws as necessary.
9. **ONLY** power up the Sani Disc when the circular cover (covering the globes) is in place.
10. Attach WARNING labels to Isolator Switch. (Labels provided by us)
11. Once installation is complete contact us and we will perform a Safety and Efficacy Test using CSIR calibrated test equipment. Pricing will be confirmed at the time of request if applicable.
12. Each Disc must have an ON/OFF with in the same room or close proximity mounted ABOVE head height with warning labels. Do not switch off except for cleaning and maintenance.
13. For any technical advice feel free to contact us on 011 474 3079.

Installation Instructions for a Sani Disk


1. Remove the three fixing screws located on the plate with lamp holders and fans fitted.
2. Now take the base plate and use the four provided holes to securely mount the unit onto the ceiling. (If the ceiling is too high and optional extension arm can be used (not included, but can be purchased from us))

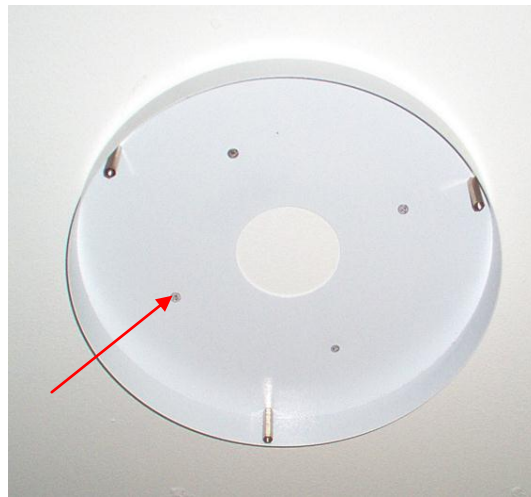


3. Cut a suitable hole in the ceiling for the power cable.
4. Now connect the cable to the L,E,N connectors using the connector block provided.

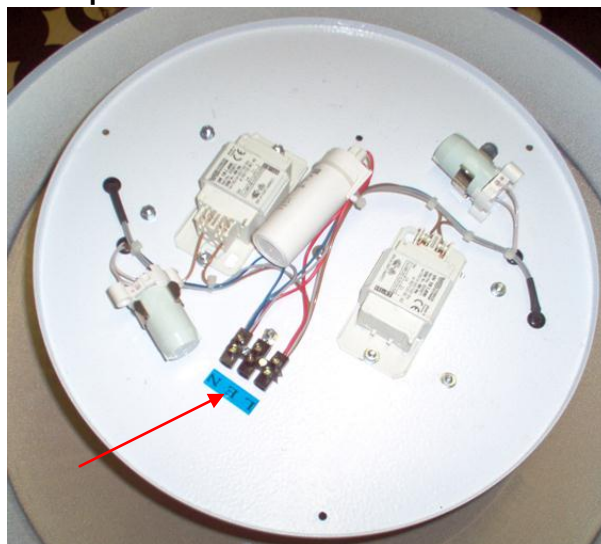


5. Re-mount the cover and base plates using the three screws provided.

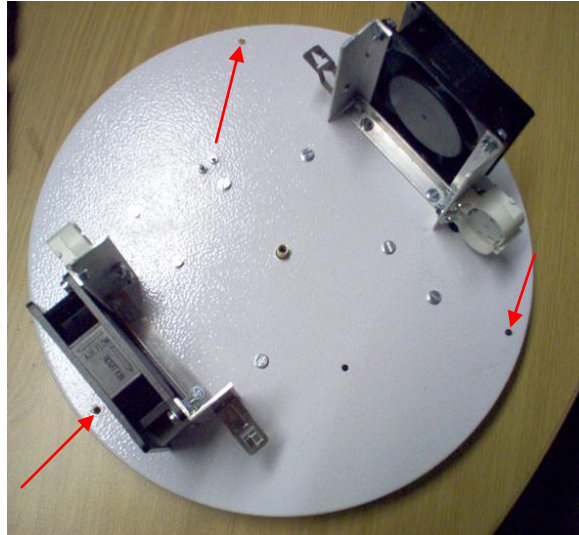

6. Screw the provided threaded rod into the centre of the cover plate.

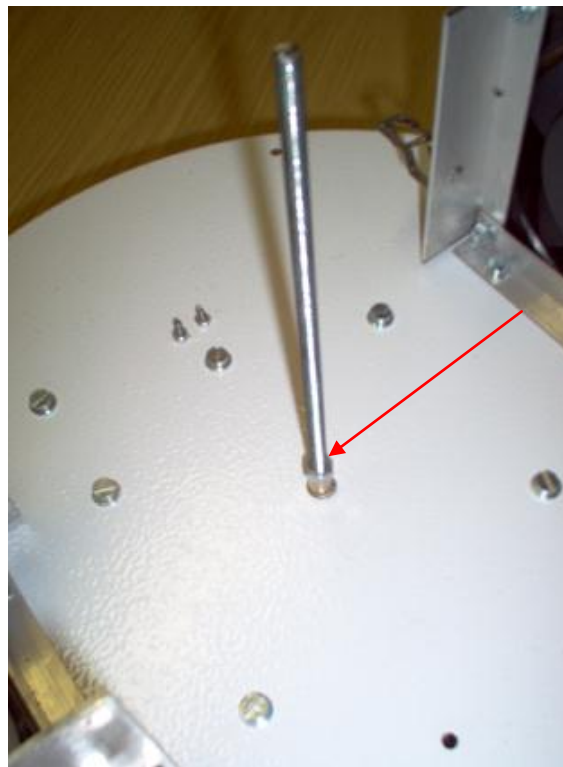

7. Insert the two PL-18Watt globes into their holders and carefully clip the front of the globe onto the metal globe holder.

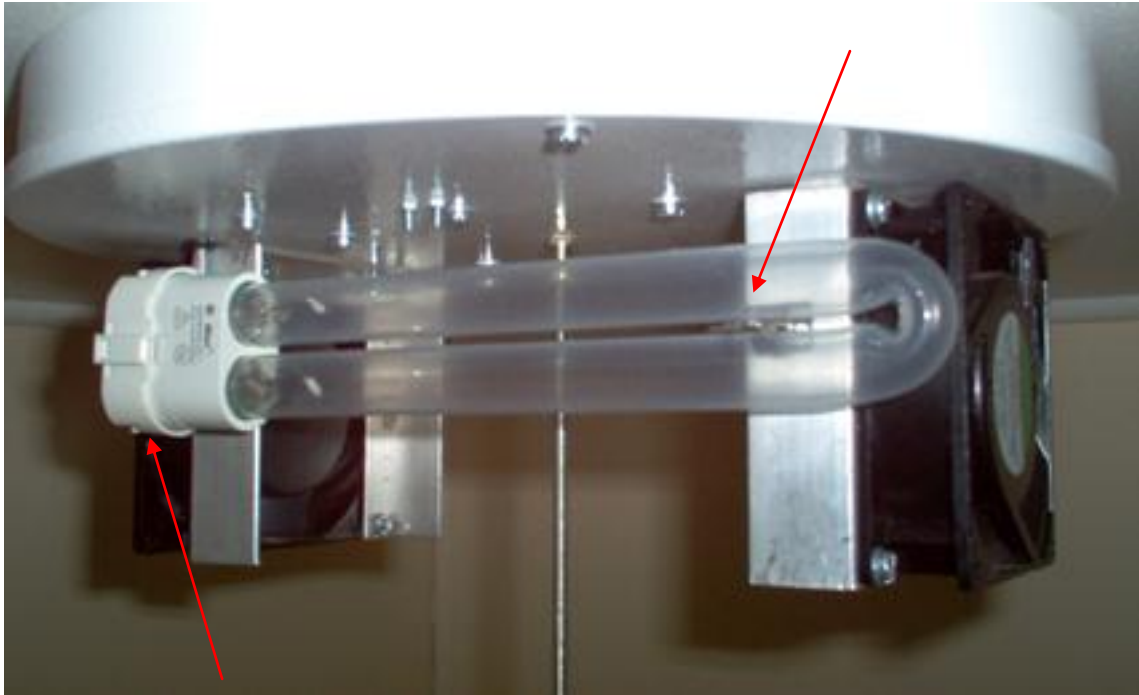

8. Take the cover and line the hole up with the threaded rod and insert the threaded rod through the hole.
9. Place the washer over the threaded rod and fasten the disk using the provided domed nut.



10. With this the installation will be complete. You are now ready to switch your unit on.

**NEVER SWITCH THE UNIT ON WITH THE COVER REMOVED.
NEVER LOOK DIRECTLY INTO THE LAMPS!**

Version 4 – January 2013